



STANDARD STRATOCASTER WIRING

Thanks for purchasing Tonerider Stratocaster pickups. This guide provides wiring and installation information for all our TRS series Stratocaster pickups.

Most Stratocaster guitars use a 5-way switch, and we've included a large, easy-to-read diagram for this standard configuration.

All Tonerider pickups have a 5-year warranty when purchased new. Please keep your receipt and see the enclosed warranty card for details.


POLARITY

All our Strat pickups are wound with the following polarity and winding direction:

- Neck and Bridge: North Pole Up / Clockwise Wind.
- Mid: South Pole Up / Counter-clockwise Wind

THE QUICK INSTALLATION GUIDE:

- * Install the pickups into the pickguard cavities.
- * The WHITE and YELLOW pickup wires from the pickups should be soldered to the correct lugs of the 5-way switch.
- * The BLACK pickup wires should be soldered to a ground point, normally the back of the volume pot.
- * Reinstall the pickguard and re-string the guitar.
- * Pressing the strings against the high frets, set the pickup heights to 2.5mm from the strings (neck and mid) and 2mm (bridge). This is only a guide. The pickups can be adjusted further when playing a good recording or live volume.

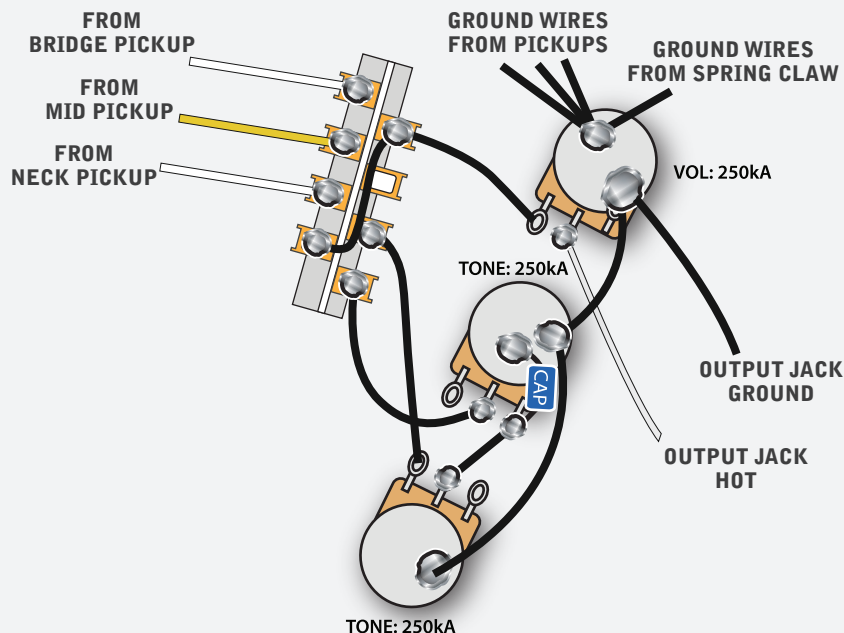

3-WAY, 1-VOL, 2-TONE WIRING

CAPACITOR & POTENTIOMETER VALUES

We design all our Stratocaster pickups to perform with the most common potentiometer and capacitor configurations - 250k Audio Pots and 0.047uf capacitors. A 0.02uf capacitor will roll off less high-end and is a good alternative.

FURTHER INFORMATION

If you have any questions then give us Email us on service@tonerider.com or give us a call on +44 1227 469414.

More wiring guides are available for download at www.tonerider.com