



## STANDARD STRATOCASTER WIRING

Thanks for purchasing Tonerider Stratocaster pickups. This guide provides wiring and installation information for all our TRS series Stratocaster pickups.

Most Stratocaster guitars use a 5-way switch, and we've included a large, easy-to-read diagram for this standard configuration.

All Tonerider pickups have a 5-year warranty when purchased new. Please keep your receipt and see the enclosed warranty card for details.


### POLARITY

All our Strat pickups are wound with the following polarity and winding direction:

- Neck and Bridge: North Pole Up / Clockwise Wind.
- Mid: South Pole Up / Counter-clockwise Wind

### THE QUICK INSTALLATION GUIDE:

- \* Install the pickups into the pickguard cavities.
- \* The WHITE and YELLOW pickup wires from the pickups should be soldered to the correct lugs of the 5-way switch.
- \* The BLACK pickup wires should be soldered to a ground point, normally the back of the volume pot.
- \* Reinstall the pickguard and re-string the guitar.
- \* Pressing the strings against the high frets, set the pickup heights to 2.5mm from the strings (neck and mid) and 2mm (bridge). This is only a guide. The pickups can be adjusted further when playing a good recording or live volume.

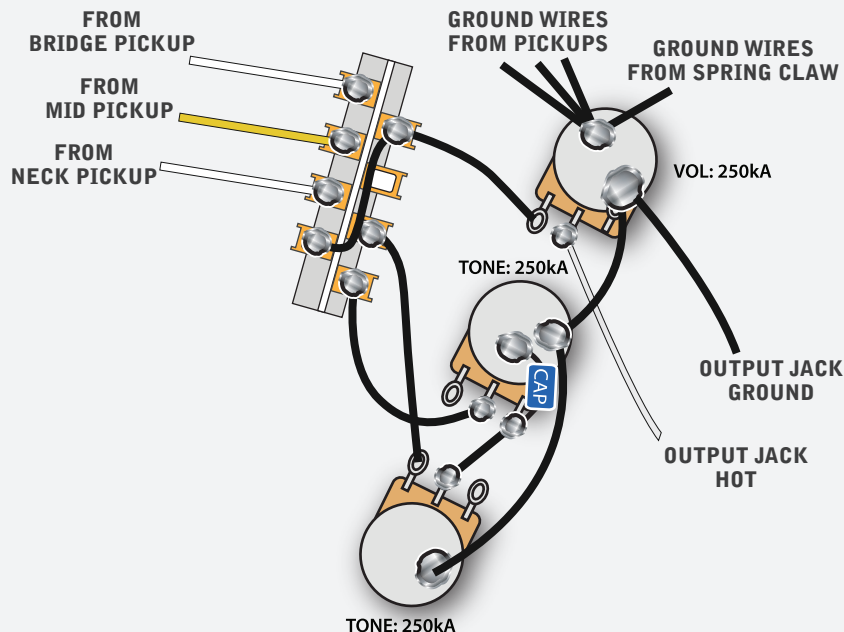

3-WAY, 1-VOL, 2-TONE WIRING

### CAPACITOR & POTENTIOMETER VALUES

We design all our Stratocaster pickups to perform with the most common potentiometer and capacitor configurations - 250k Audio Pots and 0.047uf capacitors. A 0.02uf capacitor will roll off less high-end and is a good alternative.

### FURTHER INFORMATION

If you have any questions then give us Email us on [service@tonerider.com](mailto:service@tonerider.com) or give us a call on +44 1227 469414.

More wiring guides are available for download at [www.tonerider.com](http://www.tonerider.com)